

Model 5104 Antenna

System Settings and User Notes



The Difference is the Data

Geophysical Survey Systems, Inc.

13 Klein Drive, P.O. Box 97

North Salem, NH 03073-0097

Phone: (603) 893-1109 / FAX: (603) 889-3984

www.geophysical.com

sales@geophysical.com



Limited Warranty, Limitations Of Liability And Restrictions

Geophysical Survey Systems, Inc. hereinafter referred to as GSSI, warrants that, for a period of 12 months from the delivery date to the original purchaser, GSSI's products will be free from defects in materials and workmanship. EXCEPT FOR THE FOREGOING LIMITED WARRANTY, GSSI DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. GSSI's obligation is limited to repairing or replacing parts or equipment which are returned to GSSI, transportation and insurance pre-paid, without alteration or further damage, and which in GSSI's judgment, were defective or became defective during normal use.

GSSI ASSUMES NO LIABILITY FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR INJURIES CAUSED BY PROPER OR IMPROPER OPERATION OF ITS EQUIPMENT OR SOFTWARE, WHETHER OR NOT DEFECTIVE.

Before returning any equipment to GSSI, a Return Material Authorization (RMA) number must be obtained. Please call the GSSI Customer Service Manager who will assign an RMA number. Be sure to have the serial number of the unit available.

GSSI does not convey any license under its patent or other intellectual property rights or the rights of others.

Note: Information in this manual is subject to change without notice. Please consult the manual updates supplied with your system and contact GSSI with any additional questions.

Copyright© 2004 Geophysical Survey Systems, Inc.

All rights reserved, including the right of reproduction in whole or in part in any form

Published by Geophysical Survey Systems, Inc.
13 Klein Drive
North Salem, New Hampshire 03073-0097

Printed in the United States

GSSI and SIR are registered trademarks of
Geophysical Survey Systems, Inc.

FCC Notice (for U.S. Customers):

This device complies with part 15 of the FCC Rules:

Operation is subject to the following conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Operation of this device is restricted to law enforcement, fire and rescue officials, scientific research institutes, commercial mining companies, and construction companies. Operation by any other party is a violation of 47 U.S.C. § 301 and could subject the operator to serious legal penalties.

Coordination Requirements.

(a) UWB imaging systems require coordination through the FCC before the equipment may be used. The operator shall comply with any constraints on equipment usage resulting from this coordination.

(b) The users of UWB imaging devices shall supply detailed operational areas to the FCC Office of Engineering and Technology who shall coordinate this information with the Federal Government through the National Telecommunications and Information Administration. The information provided by the UWB operator shall include the name, address and other pertinent contact information of the user, the desired geographical area of operation, and the FCC ID number and other nomenclature of the UWB device. This material shall be submitted to the following address:

Frequency Coordination Branch., OET
Federal Communications Commission
445 12th Street, SW
Washington, D.C. 20554
ATTN: UWB Coordination

(d) Users of authorized, coordinated UWB systems may transfer them to other qualified users and to different locations upon coordination of change of ownership or location to the FCC and coordination with existing authorized operations.

(e) The NTIA/FCC coordination report shall include any needed constraints that apply to day-to-day operations. Such constraints could specify prohibited areas of operations or areas located near authorized radio stations for which additional coordination is required before operation of the UWB equipment. If additional local coordination is required, a local coordination contact will be provided.

(f) The coordination of routine UWB operations shall not take longer than 15 business days from the receipt of the coordination request by NTIA. Special temporary operations may be handled with an expedited turn-around time when circumstances warrant. The operation of UWB systems in emergency situations involving the safety of life or property may occur without coordination provided a notification procedure, similar to that contained in CFR47 Section 2.405(a)-(e), is followed by the UWB equipment user.

NOTICE: Use of this device as a wall imaging system is prohibited by FCC regulations.

Model 5104 Antenna

The Model 5104 antenna has greatly improved resolution performance over previous GSSI mid-frequency antennas, such as the Model 3105 (300 MHz). The Model 5104 can be used in continuous, survey wheel or static stacking modes. The Model 5104 has a center frequency of 270 MHz when measured in air.

System Setup - Standard Settings

Shallow Profiling: (SIR-3000 present)

Setup Mode: Manual

System Run Mode: Survey Wheel (recommended) or Continuous

Range: 75 ns

Number of Gain Points: 3

Vertical Low Pass Filter: 700 MHz

Vertical High Pass Filter: 75 MHz

Samples per Scan: 512

Bits per Sample: 16

Scans per Second: Set to maximum scan rate allowed by the SIR System used..

Deep Profiling: (Recommend manual setup)

Setup Mode: Manual

System Run Mode: Survey Wheel (recommended) or Continuous

Range: 175 ns

Number of Gain Points: 5

Vertical Low Pass Filter: 700 MHz

Vertical High Pass Filter: 75 MHz

Samples per Scan: 1024

Bits per Sample: 16

Scans per Second: Set to maximum scan rate allowed by the SIR System used.

Signal Position

Place the antenna on the ground and use the Automatic Signal Position selection. The system will servo and place the direct coupling pulse at the top of the time range window.

To test that you have the correct position, raise the antenna off the ground and you will observe on your system that the antenna transmit pulse will separate from the reflection from the ground. The higher that you raise the antenna, the further apart will be the two pulses.

To assure that the direct coupling pulse (time zero) is recorded the user should place the signal Position servo in the manual mode. The signal should then be moved down in the time range window until the entire surface pulse is visible and there is some 'dead time' or flat trace visible above the direct coupling pulse in the time range window.

Gain Check

The surface pulse should be about 2/3 the width of the screen. If it is greater, reduce the Gains manually. If the signal appears too small you can manually increase the Gains, but the first gain point should never exceed 10dB, the last gain point should not exceed 65dB.

Specifications

Center frequency: 270 MHz

Pulse duration: 3.6 ns


Depth of penetration: 0-25 ft depending on dielectric permittivity

Size of sensor: 17.5×17.5×7.5 inches (44.5×44.5×19cm)

Weight of sensor: 19 lbs (8.6 kg)


Mounting the Model 5104 on the GSSI Model 623 Survey Cart

Due to the 5104's size it may only be mounted in the front wheel position of the cart. Before beginning, collect the parts needed for the front mount. These are provided with the cart in a small plastic bag. The front and back bracket screws may already be in your antenna. If the front bracket is already attached, you can leave in, but you will need to remove the four (4) back bracket screws.

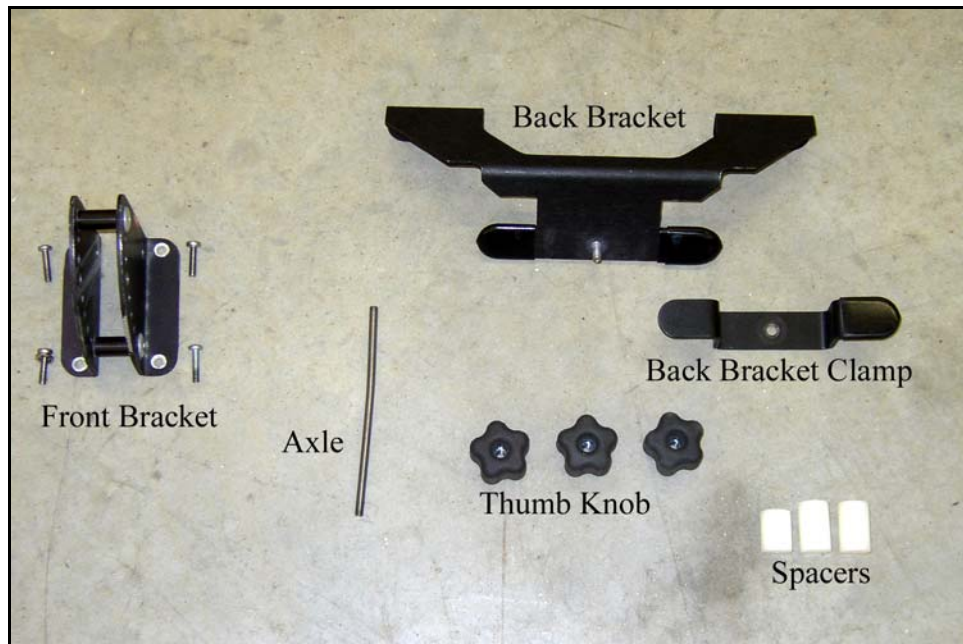


Step 1: Prepare the Cart

Begin by removing the front wheel assembly. Then loosen the four (4) screws on the front bucket bracket and slide the assembly toward the rear of the cart. Retighten the screws to secure the bucket bracket.

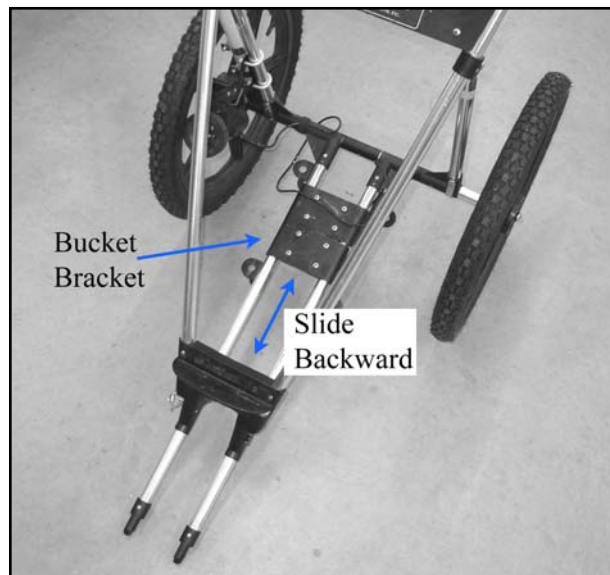


Step 2: Prepare the Antenna

Locate the front bracket and the back bracket connection points on the Model 5104. If the antenna was shipped to you with the front bracket in place, you can leave it there. If not, remove the four (4) front bracket screws. Also remove the four (4) back bracket screws.

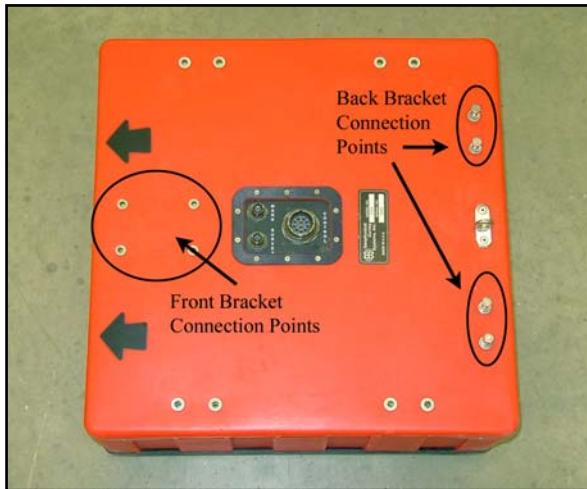

Step 3: Attach Brackets to Antenna

Screw the front and the back brackets onto the antenna as shown. These connections should only be hand-tightened. Find the axle, spacers, and 2 thumb knobs. Run the axle through the front bracket as shown. You should sandwich the smaller spacer between the bracket plates and keep the larger ones outside the bracket as shown. Loosely screw 2 of the thumb knobs onto the axle being careful to leave about 1" (2.5 cm) of the axle showing on either side as shown.

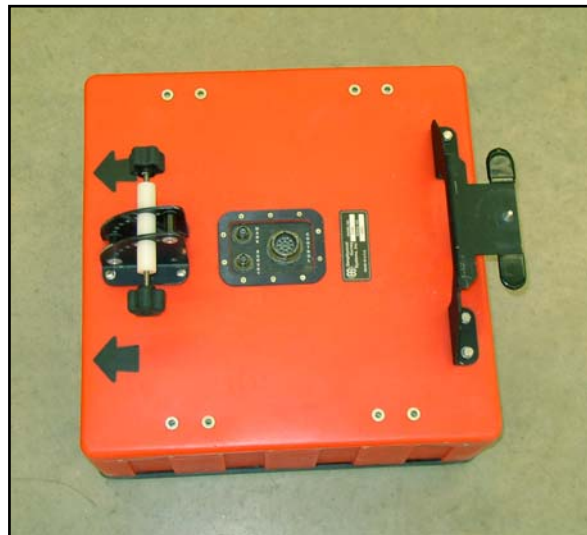

Step 4: Attach Antenna to Cart

Slide the front fork of the cart onto the front bracket axle as shown. Tighten the two thumb knobs to secure the front fork of the cart. Next find the back bracket clamp and the one remaining thumb knob. Place the back bracket clamp on the back bracket and tighten the thumb knob down to secure the cart to the back bracket.



Step 5: Attach Survey Wheel Connector

Attach the lead from the cart's survey wheel to the antenna at the connector that is labeled "SURVEY." You are now ready to attach a control cable and your choice of GSSI GPR control units.

